

# IMPORTANT

Ages 3 and up  
Surface Washable Only

Keep the installation instruction for further reference  
Please read all of the safety rules before setting up  
We believe in safety first. Please follow all of the rules for your children's safety




## **WARNING! ELECTRICALLY OPERATED PRODUCT.**

ADULT SUPERVISION REQUIRED. OPERATING BLOWER (AIR PUMP) NOT RECOMMENDED FOR CHILDREN UNDER 16 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK.

**CAUTION: NOT SUITABLE FOR ADULTS.  
MAXIMUM AGE 10 YEARS.  
ADULTS MUST NOT USE THIS BOUNCER.  
NOT SUITABLE FOR RENTAL OR COMMERCIAL USE.**

## **Set up Instructions:**



- Remove the Bouncer from the carry bag. Place the Bouncer on a level surface at least 2M from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
- Check the ground where the Bouncer is to be inflated for any sharp objects or unusual byproducts. Do not install the Bouncer over concrete, asphalt or any hard surface.
- Set up away from water and any potential fire hazards.
- Set up as near to power source as possible. After stretching the air fill tube, position the blower (air pump) at the end of the tube. Push ground stakes for air blower through blower base holes firmly to the lawn ground.(Refer to picture 1)
- Slide the end of the tube around the blower (air pump) air blow sprout and tighten the string.
- The air fill tube should be straight and untwisted. Reposition the blower (air pump) if necessary.
- Make sure the blower (air pump) "on/off" switch is in the off position.
- Plug the blower into an approved grounded outlet.
- Keep the blower (air pump) and power cord away from water and moisture.
- Ensure the blower (air pump) is free from debris and securely sited to avoid tripping. To inflate the bouncer unit, (press the reset button on GFCI) turn the blower (air pump) "on/off" switch to on. The continual air-flow blower (air pump) must be left on at all times while the Bouncer is being used.(Refer to picture 2)
- The Bouncer should take less than 2 minutes to inflate.
- Ground support stakes are used for lawn ground surfaces. Hook stakes over loops in the Bouncer. To prevent overturn or lift during play, push stakes firmly into the soil. The stakes should be placed level with or under the ground in order to reduce tripping hazards.(Refer to picture 3)
- Make sure the Bouncer is inflated fully before children enter to play.
- Air leak from the seams is needed because the product is inflated by constant air flow and this leakage is required to stop the product becoming over inflated.
- It is drawn user's attention to the orientation of the inflatable equipment installation in relation to the sun. If the Bouncer is with slide, the sliding surface shall not face to the sun as sunshine can glare the children's eyes when they are sliding down along the slide.

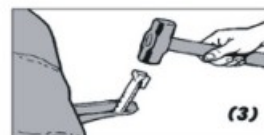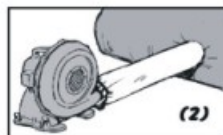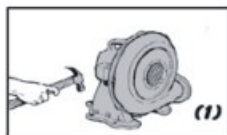

## **Take down Instructions:**

- Make sure all children exit the Bouncer.
- Make sure the Bouncer is free of foreign objects.
- Turn the blower (air pump) "on/off" switch to off.

- Unplug the blower (air pump) power cord.
- Loosen string and detach the air fill tube from the blower.
- Remove ground support stakes.
- Let the Bouncer deflate entirely. It should deflate on its own within 5 minutes. (Refer to Picture A)
- Fold it in half, and then fold it in half 2 more times, parallel to the first fold. (Refer to Picture B and C)
- Roll it up tightly from the end opposite the air fill tube. (Refer to Picture D and E)
- Slip carry bag over the rolled-up Bouncer. (Refer to Picture F)
- Flip the bag and the Bouncer over, close the bag zipper. (Refer to Picture G)

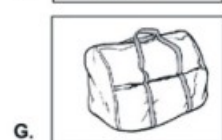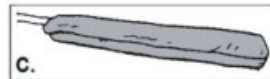

## **Maintenance:**

- To prevent overturn or otherwise becoming a hazard, you must carry out check and maintenance of the Bouncer at regular intervals, when in use or not in use.
- The seasonal inspection and maintenance should be conducted for any damage or leakage of the Bouncer.
- If there is a puncture on the jumping surface or other parts which are laminated PVC materials, please repair with the provided repair patches.
- If a part of the Bouncer other than the jumping surface or those parts which are laminated PVC materials tears, you may patch by hand with a needle and strong household thread.
- The Bouncer can be cleaned by wiping it down with a mild detergent. Keep water away from the blower (air pump) at all times.
- Do not store the Bouncer when wet. Store the product and the blower inside in dry conditions when not in use.

## **Safety Warning:**

- Failure to follow the specified instructions could result in serious injury. Adult set-up and dismantling are required. Adult supervision is required at all times while the Bouncer is in use. Never leave children unattended during play.
- Ages and sizes of children playing in the Bouncer at the same time should be comparable. Not suitable for children under 3 years, small parts may be swallowed.
- Individuals with head, neck, back or other muscular-skeletal injuries or disabilities, pregnant women, small infants and others who may be susceptible to injury from falls, bumps or bouncing are not permitted in the Bouncer.
- The Bouncer must be fully inflated before any children are allowed inside. The Bouncer must stay fully inflated until everyone is out.
- The carrying bag is not a Toy, but for packaging use only.
- Keep Bouncer a safe distance (at least 2 m) from fire, water, walls and other obstructions.
- Shoes, eyeglasses, jewelry and any hard or sharp objects that may cause injury must be removed before entering the Bouncer. Loose or baggy clothing, or clothing containing long cords should not be worn whilst playing on this product.
- Check stakes regularly during play to ensure they remain securely in the ground when using outdoors.
- Keep children away from the blower (air pump).
- To prevent choking, children may not enter the Bouncer while eating, drinking, or chewing anything in their mouth.
- No flipping, wrestling, running, or pushing allowed inside the Bouncer.
- Do not bounce against the sides, near the entrance or (for models that include a slide) on the slide area.
- Climbing or hanging on the walls, netting or exterior of the Bouncer is not allowed.
- No unauthorised modification.
- The Bouncer may not be used outside during rainy and/or lightning conditions or if winds exceed 25 MPH (40km/h).
- If the Bouncer begins to deflate, remove all children and check for disconnection of power cord or for power outage.
- To reduce the risk of fire or electric shock, do not use the blower (air pump) with any solid-state speed control device.
- Product should be regularly checked for potentially unsafe conditions such as damaged cord, plug, housing, or parts. If such damage is found, the Bouncer should not be used until properly repaired.
- Do not drag on concrete or other rough surfaces.
- In case of injury, contact a physician immediately.